

Key Features:

- Supplied with 18 ¾" and 16 ¾" rubberised shoe sets
- Requires low maintenance
- Ready for installation to ROV

J2 Subsea Gasket Change Out Tool

Gasket Tools

The gasket change out tool has been designed to remove and install 18 ¾" & 16 ¾" seals. Rubberised shoe sets aid with seal handling. It is fitted with retaining springs to maintain seal gripping in the event of hydraulic system failure.



J2 Subsea Gasket Change Out Tool

Gasket Tools



Specifications

Dimensions	Height	475mm
	Width	450mm
Weight	Weight in air	15Kg
Hydraulics	Operating pressure	210 Bar

System Components

Gasket Change Out Tool	Operating manual	
16.75" shoe set	Transit case	
18.75" shoe set	Manipulator handle	
Hydraulic hose set		